


EuroStage ES-2016 Banner Specs

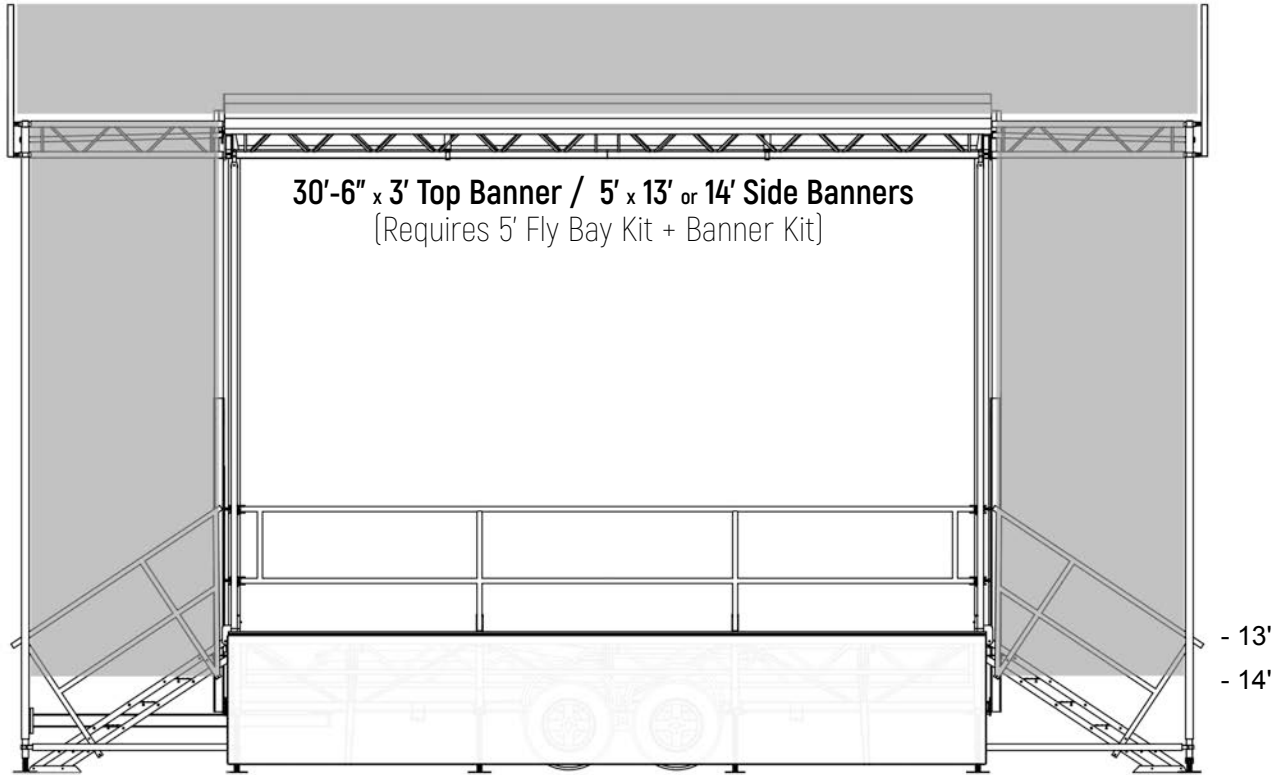

NOTES:

- Always follow HWAP requirements to release banners, walls, and other gear.
 - Always use a single blow through mesh banner. Do not combine multiple banners.
 - Use 70/30 in expected normal weather conditions.
 - Use 30/70 near beaches, mountains or expected high wind conditions.
 - Grommets every 2' on top and bottom, none needed on sides.
 - Top banner must connect to 4 end banner post eyebolts.
- The horizontal paracords are for stability only.
- Top 2 corner points with HD break strength zips and bottom 2 corner points with Min break strength zips or paracord anchored at ground level for easy release.
 - Only use every other grommet on the top of the banner - 4'.
 - Only attach the top banner at center point on the bottom and your choice of release method on the bottom 2 corners. Top banners bottom edge must be able to be released for HWAP.
 - Side Banner tops connect to Banner Offset Bar with HD zips. The lower section must be able to be released for HWAP.
 - ES-3322 Fly Bay Kit and Banners require lower angle brace on vertical fly bay post.
 - Never fly any banners from stage with out the BANNER KIT following the HWAP and these notes.

