


EuroStage ES-3322 Banner Specs

50' x 4' Top Banner / 8' x 17' or 18' Side Banners

[Requires 8.25' Fly Bay Kit + Banner Kit]

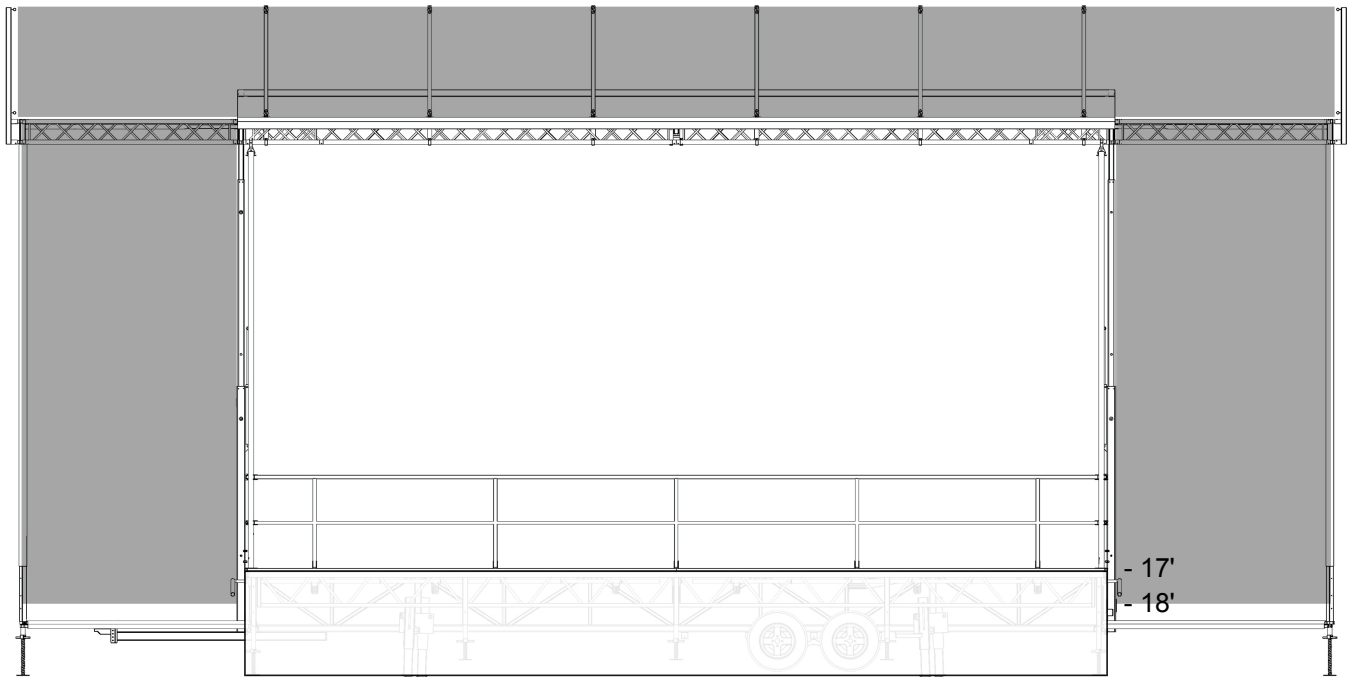


NOTES:

- Always follow HWAP requirements to release banners, walls, and other gear.
- Always use a single blow through mesh banner. Do not combine multiple banners.
- Use 70/30 in expected normal weather conditions.
- Use 30/70 near beaches, mountains or expected high wind conditions.
- Grommets every 2' on top and bottom, none needed on sides.
- Top banner must connect to 4 end banner post eye-bolts. The horizontal paracords are for stability only.
- Top 2 corner points with HD break strength zips and bottom 2 corner points with Min break strength zips or paracord anchored at ground level for easy release.
- Only use every other grommet on the top of the banner - 4'.
- Only attach the top banner at center point on the bottom and your choice of release method on the bottom 2 corners. Top banners bottom edge must be able to be released for HWAP.
- Side Banner tops connect to Banner Offset Bar with HD zips. The lower section must be able to be released for HWAP.
- ES-3322 Fly Bay Kit and Banners require lower angle brace on vertical fly bay post.
- Never fly any banners from stage with out the BANNER KIT following the HWAP and these notes.

33' x 4' Top Banner


[Requires Banner Kit]

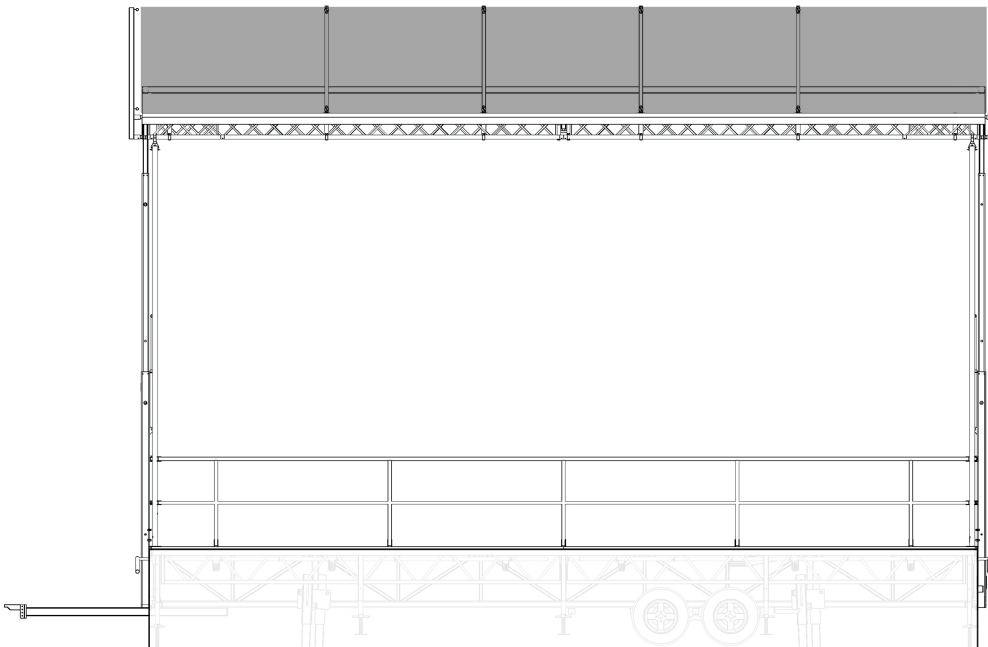

EuroStage ES-3322 Banner Specs

56' x 4' Top Banner / 11.5' x 17' or 18' Side Banners

(Requires 8.25' + 3.25' Fly Bay Kits + Banner Kit)

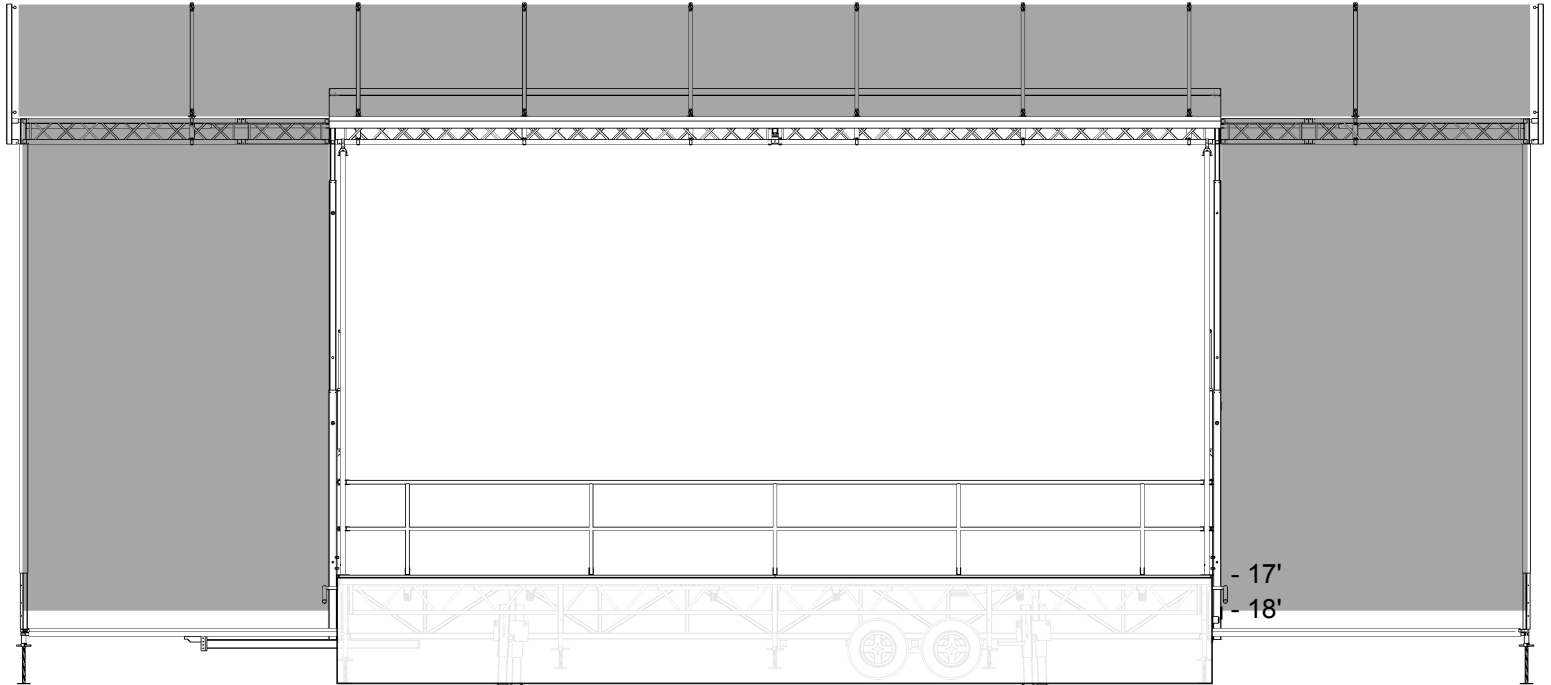

NO BANNERS

(1m Cantilever Option)

